

### Step 1: Basic Cleaning



Basic Cleaning

Finalit No. 9 Lime and Cement Bloom Remover + Finalit No. 1 Intensive Cleaner (Neutralisation)



Dilute No. 9 up to 1:10 with water



Apply No. 9 and agitate immediately



After approx. 15 min. re-agitate if necessary. Then rinse thoroughly



Dilute No. 1 in a ratio of 1:20 with water



Apply No. 1 and agitate immediately



Rinse with water after approx. 15 minutes



Allow cleaned surface to dry

No. 9: 1l for up to 30m<sup>2</sup>, depending on the degree of soiling  
No. 1: 1l for up to 60m<sup>2</sup>

### Step 2: Pretreatment



Pretreatment

Finalit No. 21 Fixative Penetrating Stopper / Pretreatment



Pour No. 21 into container and use undiluted



Apply 1-2 times, depending on the absorbency



Remove excess product immediately



Let dry for approx. 1 hour

No. 21: 1l for up to 30m<sup>2</sup>, depending on the absorbency of the material

### Step 3: Protection



Protection

Finalit No. 20 Hot Impregnation / Long term protection



Heat No. 20 in a water bath to 50-70°C



Pour No. 20 into container and use undiluted




Apply 1-2 times, depending on the absorbency



Remove excess product immediately



Let dry for approx. 1 hour

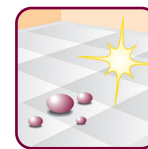

Long term protection

No. 20: 1l for up to 30m<sup>2</sup>, depending on the absorbency of the material

Alternative: Finalit No. 25 Premium-Cool Impregnation as per instructions for No. 25