

APPLICATION INSTRUCTIONS

Sandstone, limestone, concrete

highly absorbent materials

Finalit 
Stone & Ceramic Care

Step 1: Basic Cleaning



Basic Cleaning

Finalit No. 9 Lime and Cement Bloom Remover + Finalit No. 1 Intensive Cleaner (Neutralisation)




Dilute No. 9 up to a ratio of 1:10 with water



Apply No. 9 and agitate immediately



After approx. 15 min. re-agitate if necessary. Then rinse thoroughly

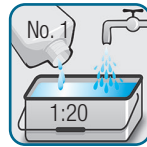


Dilute No. 1 in a ratio of 1:20 with water



Apply No. 1 and agitate immediately



Rinse with water after approx. 15 minutes

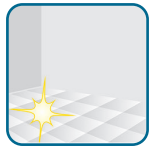

Allow cleaned surface to dry

No. 9: 1l for up to 30m², depending on the degree of soiling
No. 1: 1l for up to 60 m²

Step 2: Pretreatment



Pretreatment

Finalit No. 21S Pores Filler / Pretreatment for basic protection



Dilute No. 21S 1:3 with water



Apply 1-2 times, depending on the absorbency



Remove excess product immediately

No. 21S: 1l for up to 20m², depending on the absorbency of the material

Step 3: Protection



Protection

Finalit No. 20 Hot Impregnation / Long-term protection



Heat No. 20 in a water bath to 50-70°C



Pour No. 20 into container and use undiluted




Apply 1-2 times, depending on the absorbency



Remove excess product immediately



Let dry for approx. 1 hour

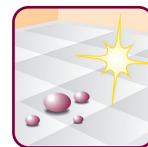

Long term protection

No. 20: 1l for up to 30m², depending on the absorbency of the material

Alternative: Finalit No. 25 Premium-Cool Impregnation as per instructions for No. 25